

A DVANCED


C ONSTRUCTION

NFORMATION

EVELOPMENT


## Collaboration of Architectural & Structural Drawing




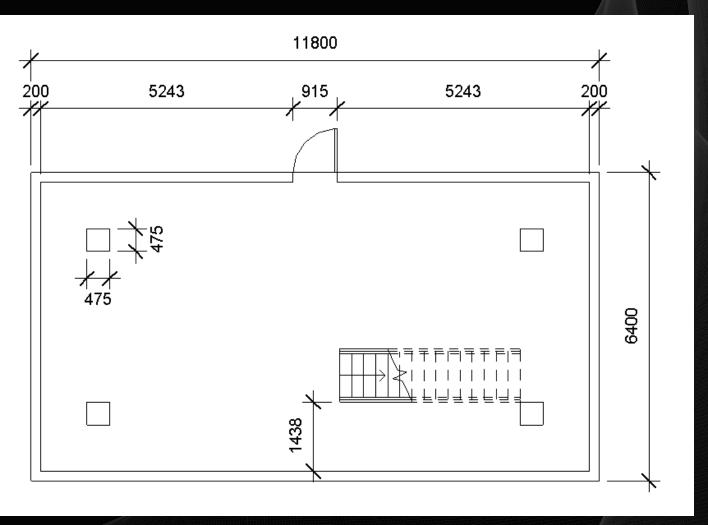

**Architectural Drawing** 




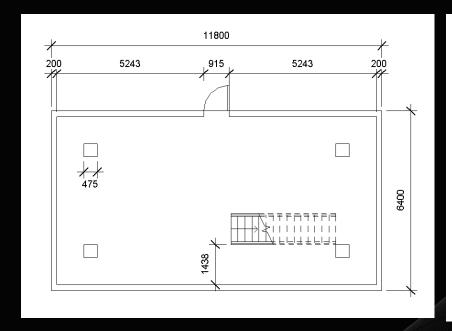

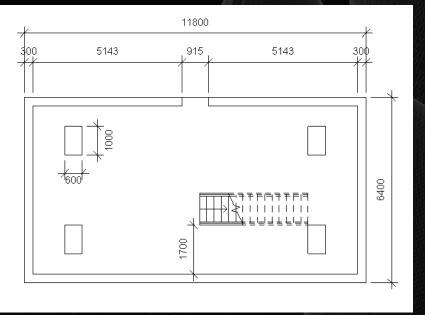


**Architectural Drawing** 


**Structural Drawing** 

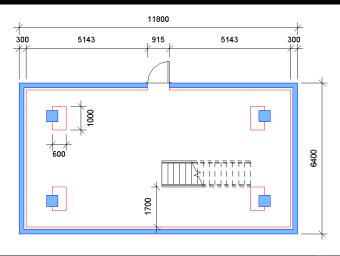

**Collaboration Drawing** 


- Delete the preliminary staircase
- In order to keep the door in collaboration drawing, create "Hidden Workset" for all architectural walls, then hide it

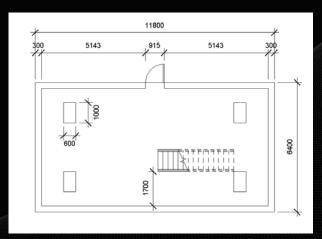


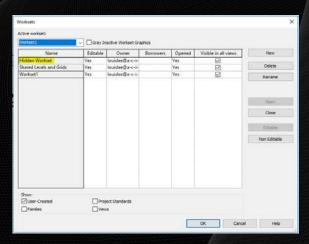

## **Preliminary Design**

## **Tender Stage**








Arch. Wall



Arch. Floor









Arch. Column

**Column Finish** 

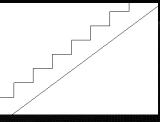

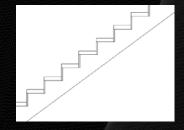

Arch. Finish

**Stair Finish** 

